## **Brush Fencing**

Step 2

Step 5

bottom rail.


Assemble the frame of your panel by

screwing two C section posts back-


to-back and place posts in holes.

Insert brush panel, ensuring it is framed within the side posts and

If you like the privacy that a colorbond boundary fence offers, but prefer a warmer and more rustic finish - our stylish Brush Panel Fencing could be the perfect solution. Tea tree branches are stitched together with galvanised wires and can help to drown out unwanted road noise. Made in Australia with sustainably sourced Tea tree and pressed to 50ml thick, sturdy and strong - its quality is far superior to many of the other options on the market today.

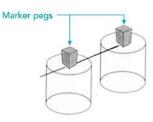

**Step 1** Mark out and dig post footings at 1800mm hole centres and 600mm deep.

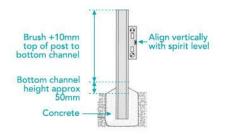

#### Step 4

Using a temporary brace to support the posts, concrete the posts into the ground. Ensure the posts are aligned vertically using a spirit level. Allow the concrete to set overnight.





Specifications	
Panel Height	1800mm
Panel Length	1800mm
Panel Thickness	50mm
Top & Bottom rail size	55mm high x 60mm wide channel





#### Step 3

Screw the bottom rail (55mm high x 60mm wide U channel) into position allowing 650mm overall for concreting into ground and the lower rail to sit around 50mm above ground level



Step 6 Fit top rail and screw into position.



Head on over to jackalfencing.com.au

# **Brush Fencing**

A Warm and Rustic feature – Privacy without cold metal finish – Can help reduce irritating road noise



### Innovative Fencing Solutions



Think fencing, think Jackal.

Call us on **03 5444 2472** or visit **jackalfencing.com.au** 

